


**YOUR HOME  
FIRE DEFENSE KIT  
SHOULD CONTAIN  
THE FOLLOWING:**

quick  
disconnect  
with insert

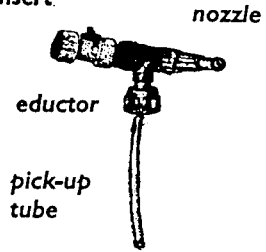

Barricade  
concentrate

1




Remove the black cap and white safety plug from the container. Insert the white pick-up tube into the yellow Barricade container.

2




Tighten the eductor unit onto the container. Remove the quick disconnect from the eductor unit.

3

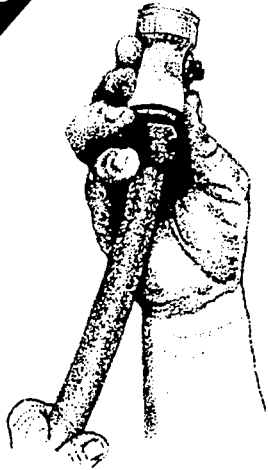


Attach the male end of your garden hose to the quick disconnect. Make sure the valve is "off". Re-attach the quick disconnect back on to the eductor unit and turn on your water faucet.

4

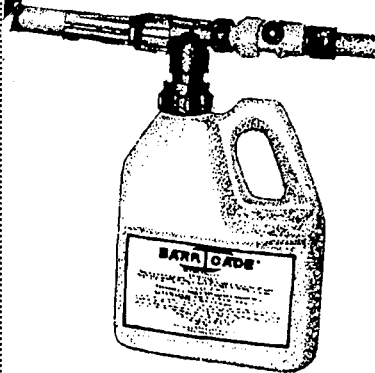

Your home kit is now ready to use. Turn the valve to the "on" position and begin spraying.

5

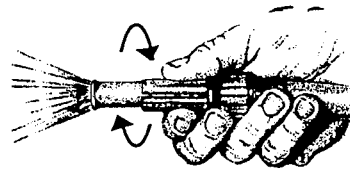

Adjust the nozzle for desired reach and pattern.

# BARRICADE®

FIRE BLOCKING GEL

## WHAT TO DO FIRST

- Coat the vulnerable areas of your home first, such as the eaves, wooden decks, vents, exterior siding, etc.
- Coat all windows to protect interior drapes and furniture from radiant heat.
- Coat the roof areas especially if they are flammable, such as cedar or wood shake. Use a ladder when applying the gel to your roof to avoid slipping.
- Coat any exposed fire hazard such as LP tanks, gas grills and automobiles.
- Coat brush and shrubbery that are close to your home (especially hedges against the home).
- Coat the underneath of any wood structure that may be exposed to heat and flame.
- Coat boats, RV's, other vehicles, and outside storage areas.

## SAFETY TIPS

- Barricade is very slippery when applied. Use caution when walking in the area in which you have just applied the product.
- Use a ladder for out-of-reach areas of your home.

## CLEANING TIPS

After using the Home Fire Defense Kit, the entire unit should be disassembled and flushed thoroughly with fresh water until all the Barricade residue is gone.

For more in-depth instructions, visit our website at [www.BarricadeGel.com](http://www.BarricadeGel.com) or call 1-800-201-3927